

[LIEBHERR R934 LITRONIC EXCAVATOR OPERATORS OPERATING MANUAL](#)

Type: R 934 LITRONIC

Serial no. from: 5406

Type no.: 647 / 648 / 649 / 700 / 731

Pages: 189

Order number: 8504068 B

Manufacturer: Liebherr



[DOWNLOAD MANUAL HERE](#)

These operating instructions have been written for the machine operator and for the maintenance personnel of the machine.

It contains the descriptions for:

Chapter 1 Product description

Chapter 2 Safety guidelines

Chapter 3 Control, operation

Chapter 4 Malfunctions

Chapter 5 Maintenance

The operating instructions must be read and used carefully by all persons who carry out work with or on the machine before putting the machine into service for the first time and later, at regular intervals.

Work with or on the machine includes, for example: Operation including set up, troubleshooting during work procedure, disposal of production wastes, care, disposal of service and auxiliary materials. Service, including maintenance, inspection and repair work Transport or loading the machine.

This allows the machine operator to familiarize himself with the machine more easily and prevent malfunctions due to improper operation.

Observation of the operating instructions by maintenance personnel: increases reliability in use extends the service life of your machine reduces repair costs and downtime

The operating instructions belong with the machine. Make sure that a copy is always readily available in the compartment in the operator's cab.

These operating instructions contain all required information for control, operation and maintenance of your machine.

Some illustrations in these operating instructions may depict details and working devices which differ to your machine.

In some illustrations, protective devices and covers have been removed in the interests of better presentation.

Improvements, which are always being incorporated into our machines, may result in changes to your machine which are not yet indicated in these operating instructions.